



DA-052V Hard-Wired Remote Whistle

DA-052V REMOTE WHISTLE INSTALLATION:

1. Unplug Drive-Alert Control Panel
2. Connect the DA-052 or DA-052WV wires as shown below
3. Connect the BLUE wire (-) to the Drive-Alert Control Panel's NEG Terminal
4. Connect the BLACK wire (+) to the Drive-Alert Control Panel's NO Terminal

DA-500 and Connecting the DA-052 Whistle, Bells or DA-091 Power Horns

