

## Wireless DA-073 Heavy Duty Outlet with DA-606 Timer

The **DA-073 Heavy Duty Outlet** must work in conjunction with a **DA-606 Remote Control Transmitter**. Both units are pictured at right.

**Follow the steps below to program the DA-073 with the DA-606 (see Figure A):**

1. Plug a load, such as a lamp, into the **DA-073 Heavy Duty Outlet**
2. Plug the DA-073 into a 115 VAC Outlet. The RED LED will flash once and the Load should be off.
3. Press and hold the SET button for about 3 seconds, the RED LED will begin to flash. Continue to hold the SET button until the RED LED stays on steady. Then, release the SET button.
4. Press the small RED button on the back of the **DA-606 Remote Control Transmitter** for 1 second, and then the front button for 3 seconds. The RED LED on the DA-073 Outlet will flash quickly and then stop.
5. Press the front button on the DA-606 again. The load should come on and be in the 1 minute timing mode.

The DA-073 will now be controlled by the DA-606 Remote Control Unit. You may change the Load Time Duration, or cycle time, of the DA-073 by following these steps:

1. Press the front button on the DA-606 so the load is on
2. Press the SET button on the DA-073 until the RED LED flashes the number shown below for the Load ON Time Duration you would like:
 

1 flash	= 1 minute
2 flashes	= 5 minutes
3 flashes	= 15 minutes
4 flashes	= 30 minutes
5 flashes	= 60 minutes

If you wish to change the Load ON Time Duration, cycle time, again go back to step 1



**To erase all programming the DA-073:**

1. First remove power to any other DA-073, DA-071, or DA-072 accessories you may have.
2. Erasing programming will erase all Mier Wireless Accessories that are powered on.
3. Remove power to the DA-073 by unplugging it from the 115 VAC outlet.
4. Press and hold the SET button while plugging the DA-073 into the 115 VAC outlet. The RED LED will be on first, then flash rapidly, then on, then off. Release the SET button. Programming should now be erased.

DA-073 Specifications:	Input Voltage:	115 VAC, 60Hz
	Minimum Load:	10 Watts
	Maximum Rating:	1500 Watts at 115 VAC
	Operating Frequency:	315 MHz
	Range:	up to 500 feet in open area

FCC: This device is approved by the FCC and it complies with Part15 of the FCC Rules. It's operation is subject to the following conditions:

- This device may not cause harmful interference
- This device must accept any interference that may cause undesired operation

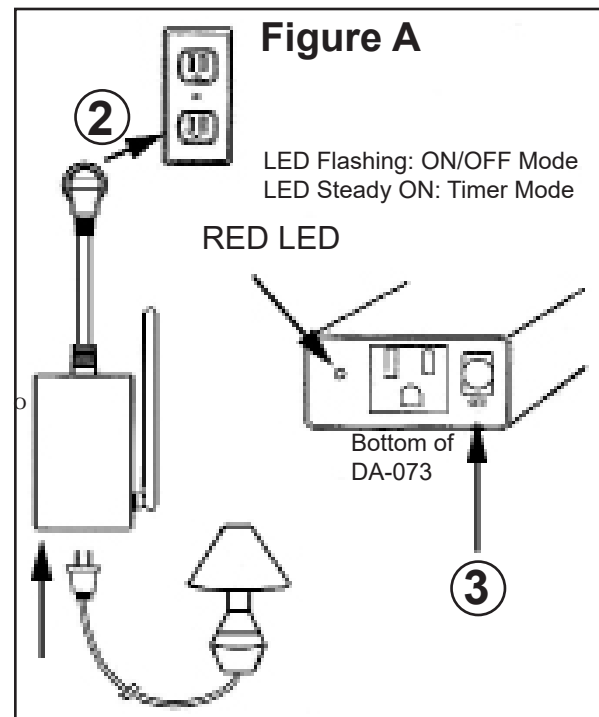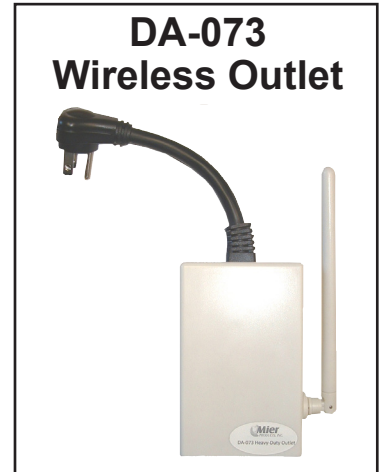

## Wireless DA-073 Heavy Duty Outlet with DA-606 Timer

The **DA-606 Wireless Remote Control Transmitter** activates light switches, lamp modules, and heavy-duty outlets.

The **DA-606 Remote Control** is triggered by a relay closure in a Drive-Alert control panel. It easily hooks directly up to a **DA-600, DA-605 or DA-700 Wireless Drive-Alert**. However, if using a **DA-500 Buried Sensor Drive-Alert** you must also order the additional **DA-500LKA Light Kit Adapter**.

This timer control can be set from 1 to 60 minutes. When triggered, the DA-606 transmits a UHF (318 MHz) coded radio signal to activate the installed DA-071 Wireless Light Switch (sold separately), DA-072 Lamp Module (sold separately), and/or DA-073 Heavy Duty Outlet devices for the specific time interval that was set. After the preset time interval, the devices will turn off.

The signal path from the DA-606 to any DA-071, DA-072, and DA-073 devices must be unobstructed by metal objects such as large appliances or mirrors so the signal path isn't blocked. If the devices are not working when a Drive-Alert detects a vehicle, try moving the DA-606, and/or the devices, so there is a clear signal path. Use the "TEST" push-button to verify operation.

The DA-606 fits into the magnetic base cradle and attaches to the Drive-Alert control panel.

The cradle switch on the DA-606 (see **Figure B**) should be **ON** to enable the Drive-Alert control of the lights. If you wish to control the lights manually, and bypass Drive-Alert activation of those lights, such as leaving the lights on during a party so arriving guests' cars won't turn the lights on and off, turn this cradle switch OFF and the Drive-Alert will have no effect on the lights. Other devices controlled by the Drive-Alert will operate as usual.

When using with a **DA-600 or DA-605 Drive-Alert** (see **Figure C**) connect the gray wires from the DA-606 to the LAST two contacts on to the Drive-Alert control panel terminal board marked NO and C. The polarity makes no difference.

When using with a **DA-500 Drive-Alert** (see **Figure D**) the whistle switch on the control panel must be in the ON position. The gray wires from the DA-606 go to the FIRST two contacts on the DA-500LKA Light Kit Adapter. The BLACK wire from the DA-500LKA is attached to the fourth contact on the DA-500 Drive-Alert control panel marked NEG, and the RED wire is attached to the sixth contact on the terminal board marked NO.

When using with a **DA-700 Drive-Alert** (see **figure E below**)

